



Fitting Instructions - Land Rover LR3 / LR4 (022)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

This is a 2 part liner.

PART 1 - THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 18 x 2" pieces, 2 x 27" pieces.
2. Lay out the liner upside down and attach the 2" pieces and 27" pieces you have cut to the Velcro that is sewn in to the liner (see sketch A). Make sure you leave the backer on the adhesive-backed Velcro until the liner is positioned in place.
3. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the North American Custom Covers label attached sits against the back of the rear seat, facing outward.

ATTACH THE BASE FIRST ...

4. On the liner floor area, at the tailgate end you will find a pocket the width of the plastic hinge cover, position this over the plastic hinge cover.
5. At the seat end of the liner, peel the backer off the 4 x 2" Velcro strips you've added to the base, and using the liner as a guide attach to the floor.

NOW FOR THE BACK OF THE SEATS ...

6. At the top of the liner where it meets the rear seat back (under the headrests) peel the backer off the 4 x 2" Velcro strips you've added, and fix these to the seat belt anchor points.
7. At the top of the seat area of the liner there are 6 lengths of material. Attach each of the 6 around each headrest pole and secure back on to itself.

NOW THE SIDES ...

8. Using the liner as a guide, affix the Velcro to the sides of your vehicle, peeling the backer off as you go (if you are fitting to a 7 seat model you will only be able to attach forward of the seat belt).

PART 2 - OPTIONAL TAILGATE PROTECTOR

9. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 14 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the tailgate.


PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD.

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

SKETCH A

GREEN INDICATES WHERE A 2" ADHESIVE-BACKED VELCRO PIECE NEEDS TO BE APPLIED

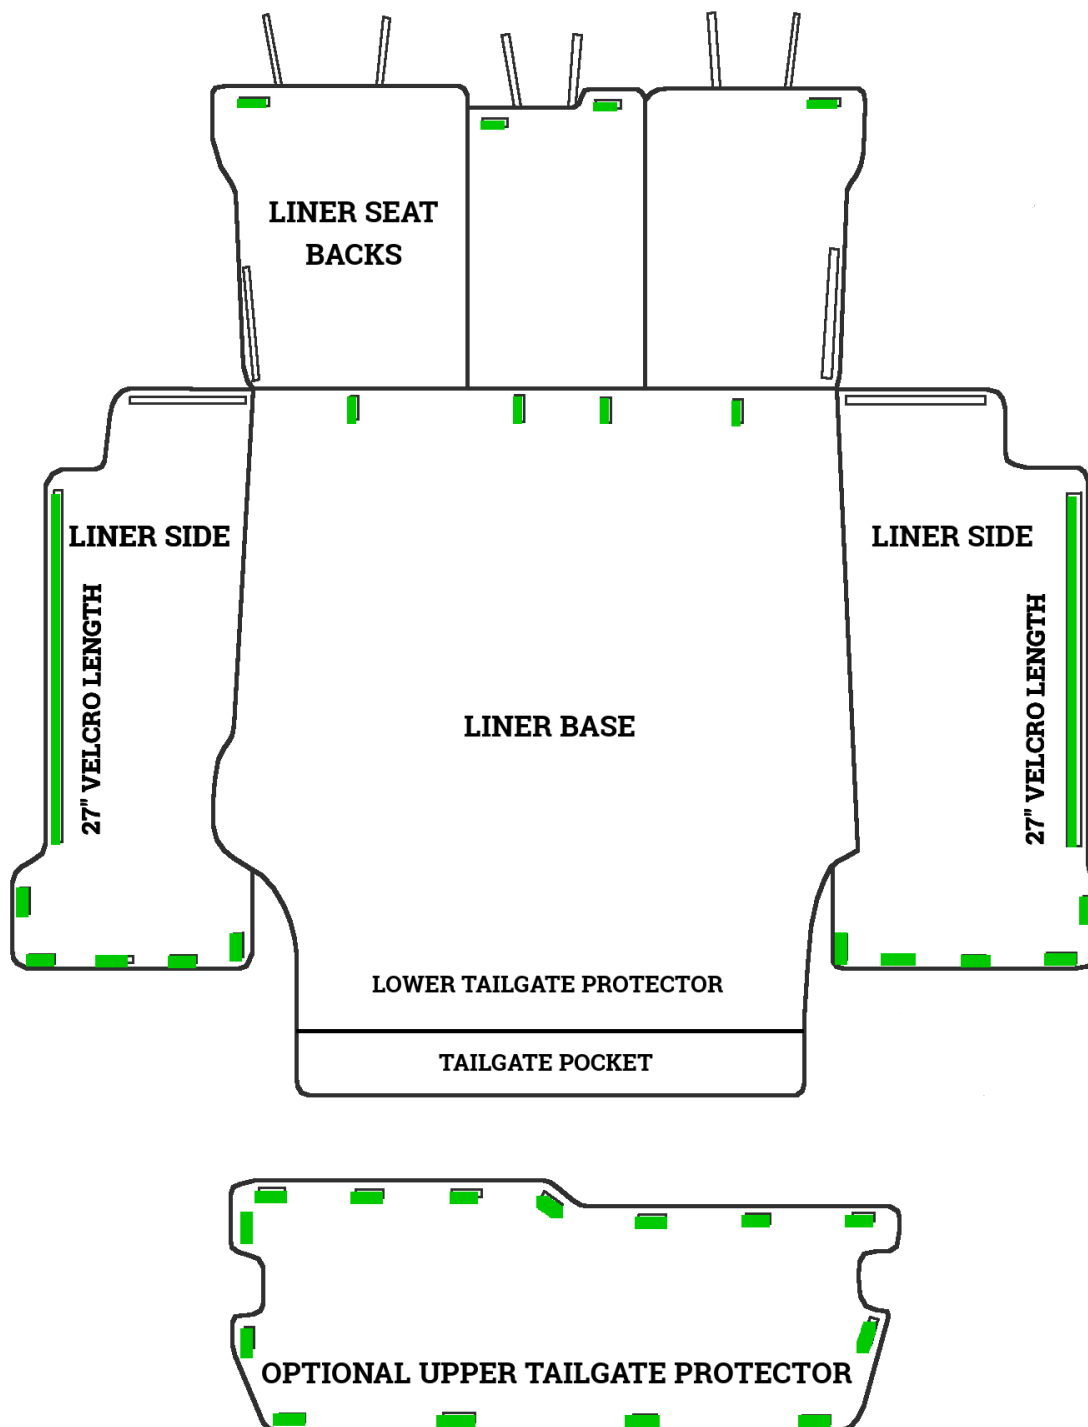

Velcro Fixing Kit - 32 x 2 inch plus 2 x 27 inch
(1 x 118 Inch Velcro strip supplied, please cut to length as required)