



Fitting Instructions - BMW X5 2007-2013 (058)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

This is a 3 part liner.

PART 1 - THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 12 x 2" long pieces, 2 x 17" long pieces. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the North American Custom Covers label attached sits against the back of the rear seat, facing outward.

ATTACH THE BASE FIRST ...

2. Locate the pocket at the tailgate end of the liner's base. Position over the plastic hinge cover.
3. Unlock the rear seat backs and fold forward a little.
4. At the seat end of the base, locate the two foam pads and push them down into the void between the floor and the seat backs. Lock the rear seats back into position trapping in the foam pads.

NOW FOR THE BACK OF THE SEATS ...

5. At the top of the seat area of the liner there are 4 lengths of material and a central elasticated length. Attach each of the 4 around each headrest pole and secure back on to itself. Loop the elasticated part around the centre headrest and back onto the liner.

NOW THE SIDES ...

6. Carefully position the side panels neatly into place, attach 6 of the 2 inch Velcro strips and 1 of the 17 inch strips of Velcro supplied to the corresponding Velcro points on the liner on either side. Using the liner as a guide attach directly to the side trim.

PART 2 - OPTIONAL UPPER TAILGATE PROTECTOR

7. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 20 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the upper tailgate.

PART 3 - OPTIONAL LOWER TAILGATE PROTECTOR

8. Cut the supplied Velcro as follows: 19 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the lower tailgate.


PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

SKETCH A

GREEN INDICATES AREAS WHERE ADHESIVE-BACKED VELCRO NEEDS TO BE APPLIED

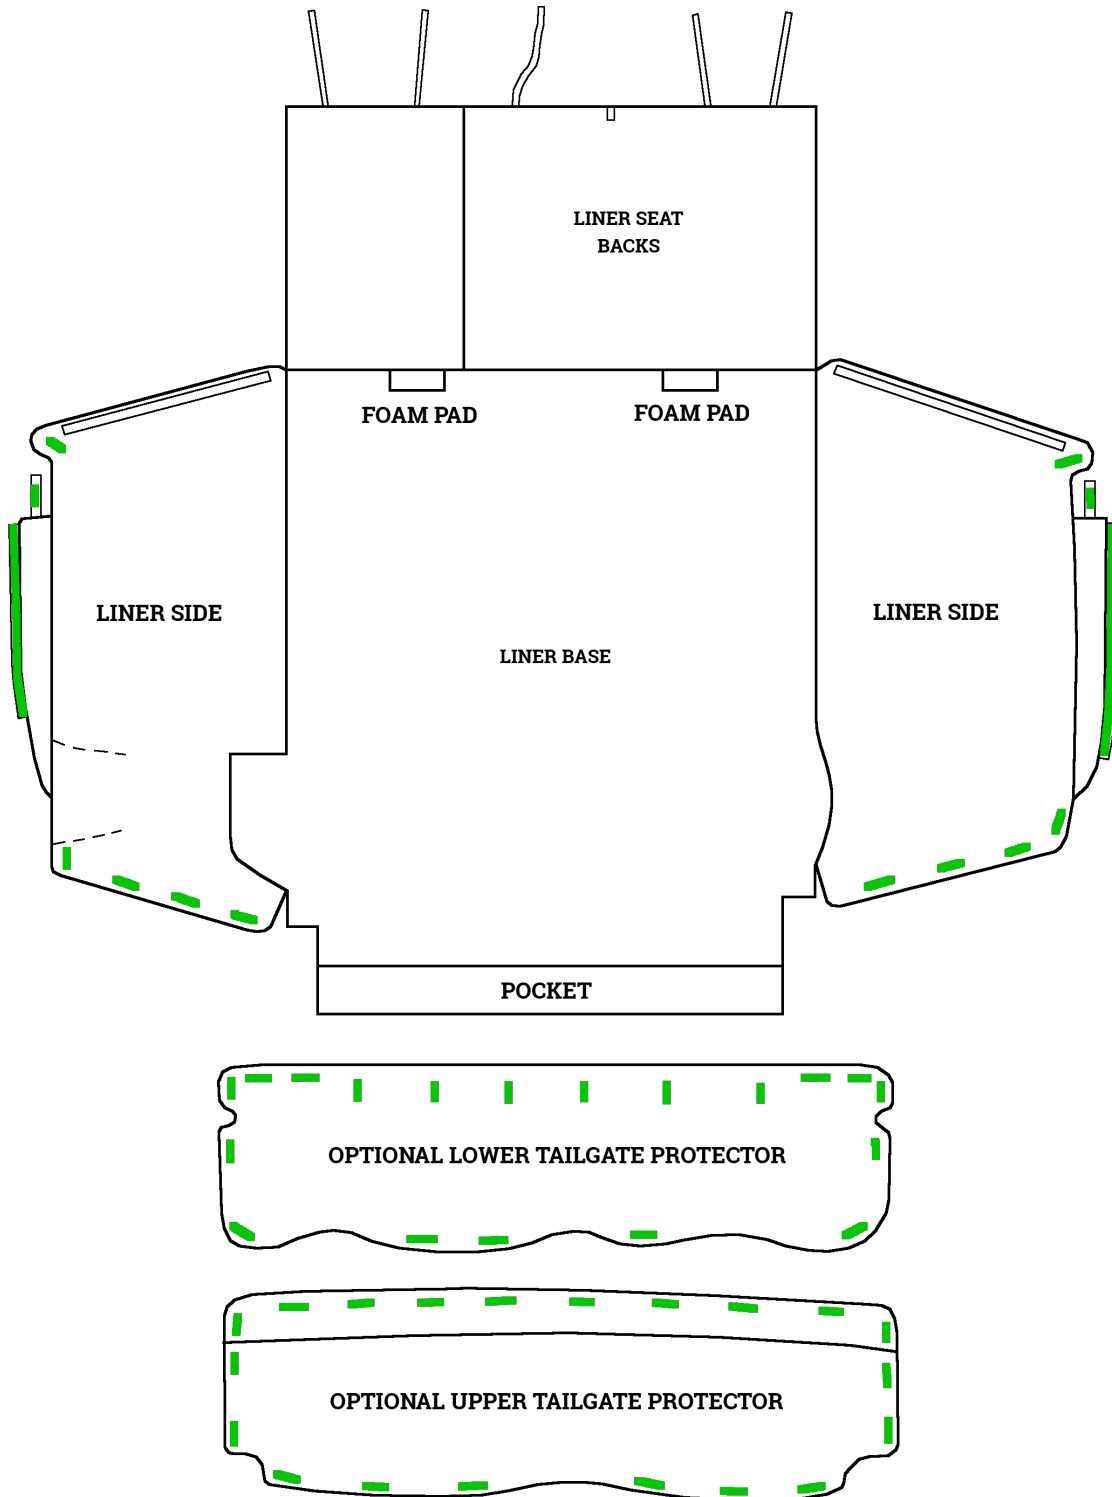

Velcro Fixing Kit - Main liner sides 58" length. Tailgate protector 78" length.
(1 x 136 inch Velcro strip supplied, please cut to required lengths)