



## Fitting Instructions - Mercedes GLC incl. AMG (BL311) 1<sup>st</sup> Generation 2015 onwards (does not fit the Hybrid version)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

PLEASE NOTE: LEFT-HAND SIDE NETTING IS UNUSABLE

REAR SEATS MUST BE SET TO THE MOST RECLINED POSITION

This is a 2 part liner.

### **PART 1 - THE MAIN LINER**

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 2 x 26" long pieces, 5 x 2" long pieces and 2 x 17" long pieces. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the Custom Covers label attached sits against the back of the rear seat, facing outward.

### **ATTACH THE BASE FIRST ...**

2. Unlock the rear seat backs and fold forward a little.
3. At the seat end of the base, locate the two foam pads and push them down into the void between the floor and the seat backs. Lock the rear seats back into position trapping in the foam pads.
4. Carefully align the rest of the base of the liner in the floor of the vehicle.
5. Attach 2 of the 17 inch long Velcro strips supplied, to the Velcro strips sewn onto the tailgate of the liner, and attach these directly to the tailgate trim using the liner as your guide.

### **NOW FOR THE BACK OF THE SEATS ...**

6. Set the rear seats to the most upright position.
7. At the top of the seat area of the liner there are 6 lengths of material. Attach each of the 6 around each headrest pole and secure back on to itself, or to the Velcro piece sewn on to the liner seat back.

### **NOW THE SIDES ...**

8. Attach the relevant length Velcro strips to the corresponding Velcro points along each liner side. Using the liner as a guide, peeling off the backer on the adhesive-backed Velcro as you go, attach directly to the side trim and carpet.


### **PART 2 - REMOVABLE BUMPER FLAP**

9. Match the hook Velcro on the bumper flap to the loop Velcro sewn at the tailgate end of the liner.

**PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD**

## IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

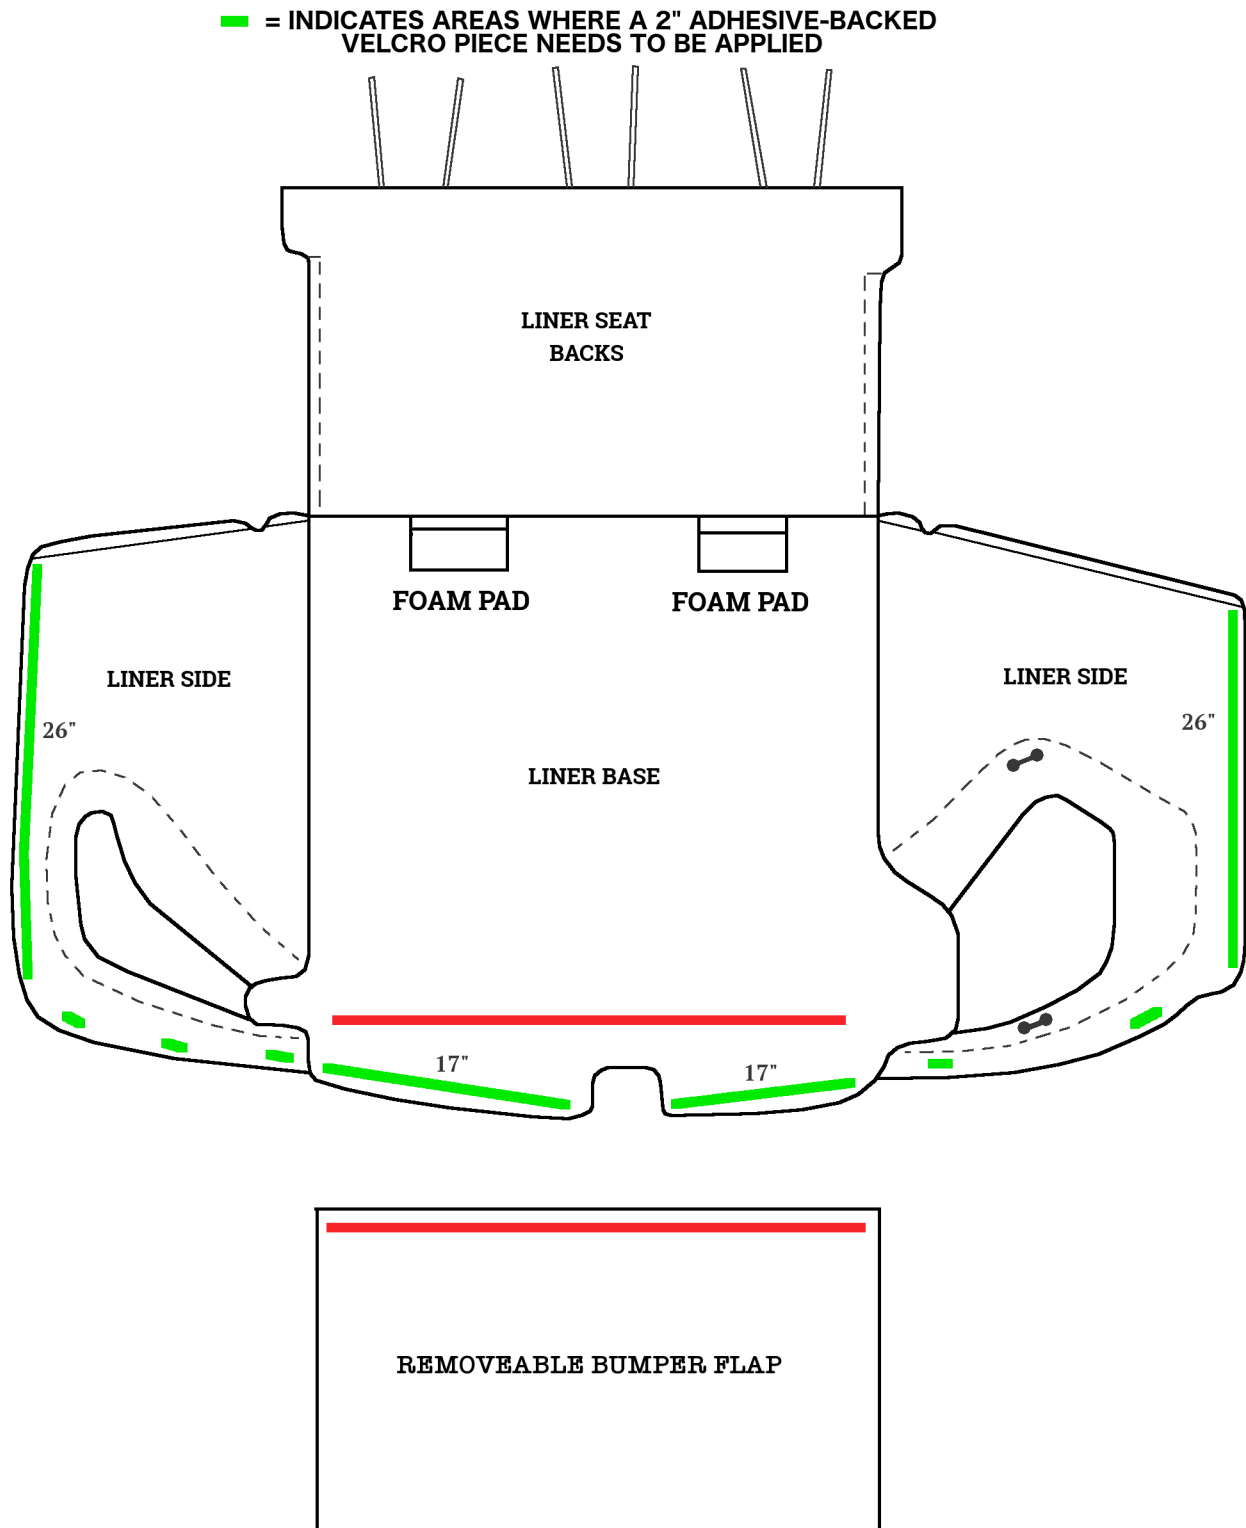

Velcro Fixing Kit - 1 x 96 inch Velcro strip supplied, please cut to required lengths