



Fitting Instructions - Land Rover Discovery 5 2017 onwards (BL313) 7 Seater (3rd row folded and not usable)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

This is a 5 part liner.

PART 1,4,5 - THE MAIN LINER & SILL COVERS

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 18 x 2" pieces, 4 x 4" pieces, 2 x 8" pieces, 2 x 10" pieces.
2. Ensure the 3rd row seats are folded down. Fold forward the 2nd row seats to access the 3rd row headrests.
3. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the Custom Covers label attached sits against the back of the rear seat, facing outward.

ATTACH THE BASE FIRST ...

4. Ensure that the base is positioned to match the shape of the cargo-area floor and hook the elastic straps around the 3rd row headrests.
5. Raise the tailgate plate and slide the cargo liner tailgate plate pocket over it. Lower the tailgate plate.
6. Align the slits for the 3rd row seatbelts (see sketch A).

NOW FOR THE BACK OF THE SEATS ...

7. Raise the 2nd row seats back up. At the top of the seat area of the liner there are 6 lengths of material. Attach each of the 6 around each headrest pole and secure back on to itself.

NOW THE SIDES ...

8. Each side has a separate sill cover. Align and attach each as shown in sketch A.
9. Attach the pieces of Velcro that you cut earlier directly to the sewn in Velcro points on each side. Using the liner as a guide affix the Velcro to the sides of your vehicle.

PART 2 - REMOVABLE BUMPER FLAP

10. Match the "hook" Velcro on the removable bumper flap to the "loop" Velcro on the main liner near the tailgate.

PART 3 - OPTIONAL UPPER TAILGATE PROTECTOR

11. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 21 x 2" pieces. Attach the pieces directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the upper tailgate.

PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD


Velcro Fixing Kit - 88 inch for the main liner
42 inch for the upper tailgate protector
(1 x 140 inch Velcro strip supplied, please cut to required lengths)

IMPORTANT GENERIC PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE

SKETCH A

— = INDICATES AREAS WHERE A 2" ADHESIVE-BACKED VELCRO PIECE NEEDS TO BE APPLIED

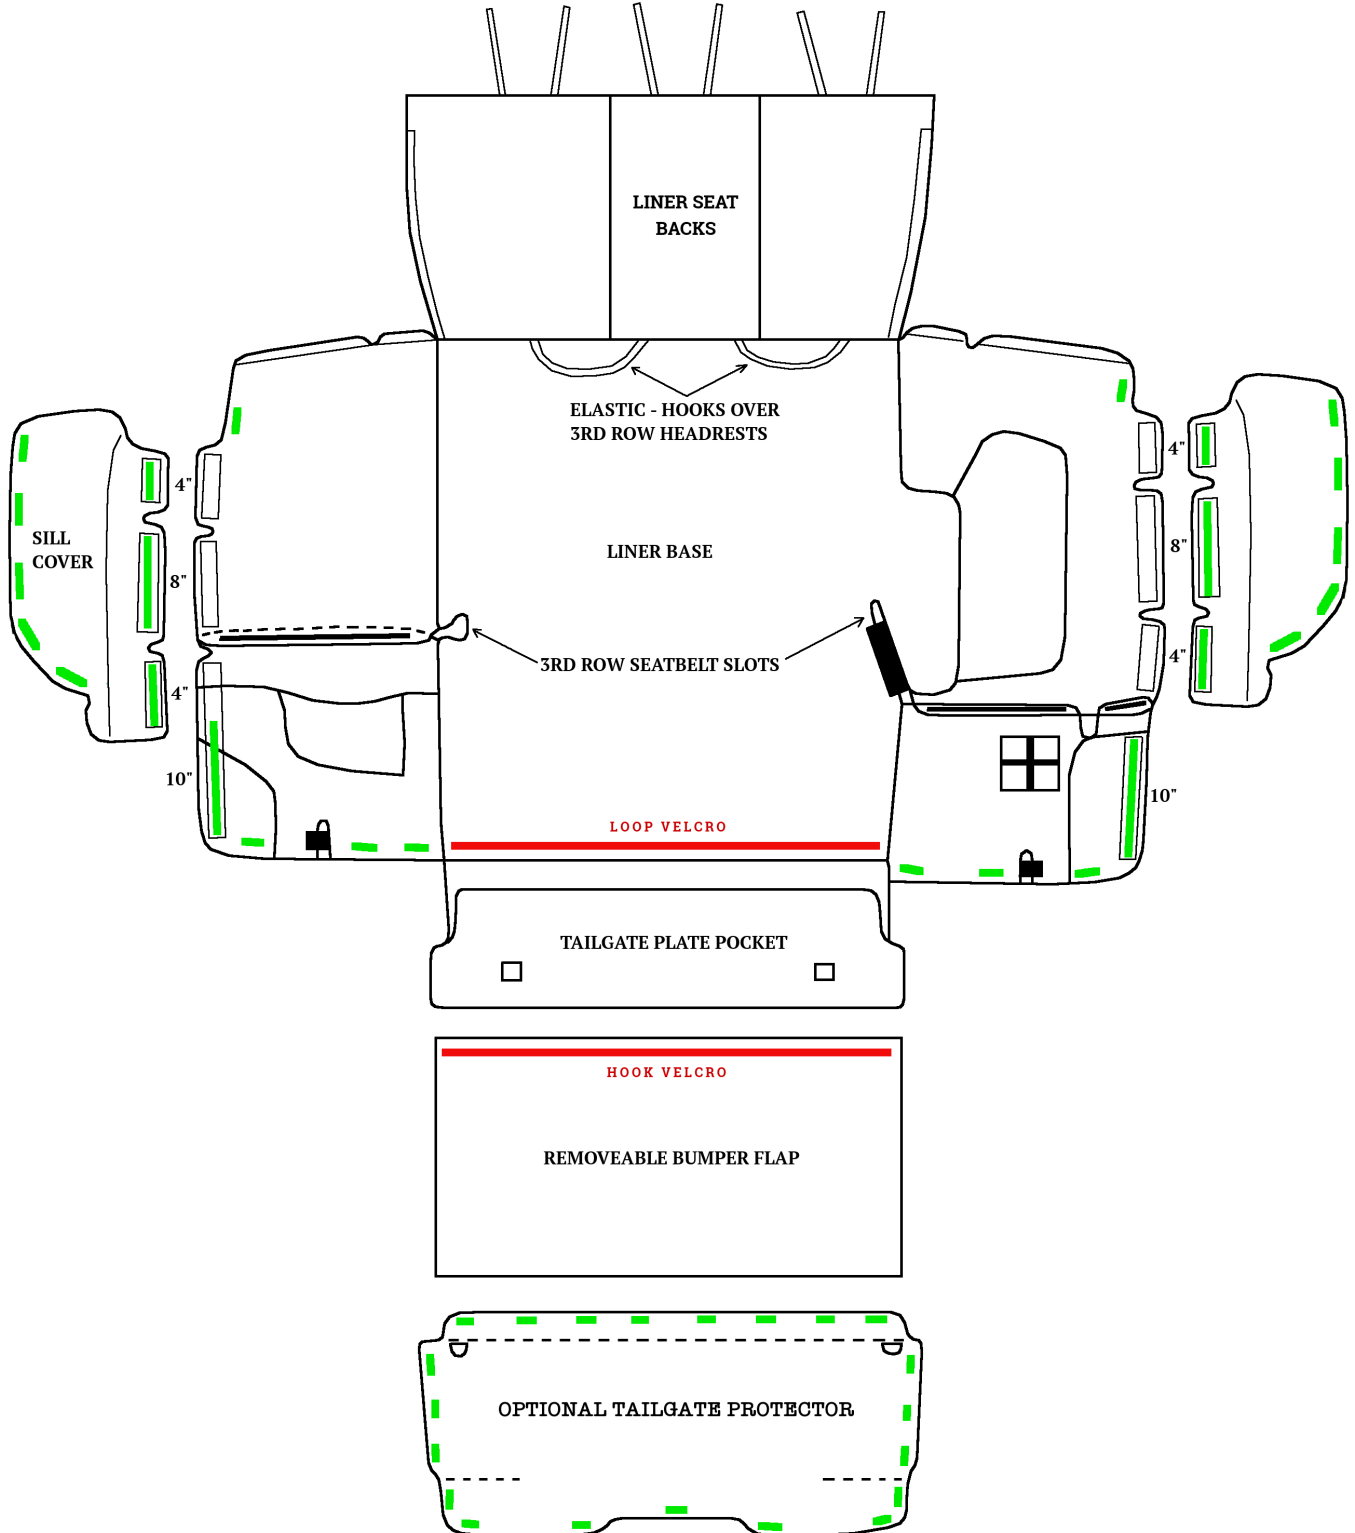

Velcro Fixing Kit - 88 inch for the main liner
42 inch for the upper tailgate protector
(1 x 140 inch Velcro strip supplied, please cut to required lengths)