



Fitting Instructions - Ford Edge Generation 2 - Model years 2015 on (BL345)

Note: Fits Ford Edge models with carpeted sides only

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

This is a 3 part liner.

PART 1 - THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 12 x 2" pieces, 2 x 15" pieces.
2. Lay out the liner upside down and attach the Velcro pieces you have cut to the Velcro that is sewn in to the liner (as shown on sketch A). Make sure you leave the backer on the adhesive-backed Velcro until the liner is positioned in place.

ATTACH THE BASE FIRST ...

3. Lay the liner in approximate position in the trunk of your vehicle. The panel with the Custom Covers label attached sits against the back of the rear seat, facing outward. Neatly align and then press down the Velcro sewn onto the floor section of the liner directly to the carpet.
4. At the tailgate end where the liner meets the rear of the vehicle, peel the backer tape off the Velcro and attach directly to the tailgate.

NOW FOR THE BACK OF THE SEATS ...

5. At the top of the seat area of the liner there are 6 lengths of material. Attach each of the 6 around each headrest pole and secure back on to itself.

NOW THE SIDES ...

6. FOR CARPETED SIDES: Using the liner as a guide, position the side panels neatly into place, some of the Velcro sewn onto the sides of the liner will attach directly to the carpet. For the remainder, peel the backer off the Velcro you attached earlier and press to attach.
7. FOR NON-CARPETED SIDES: If your Edge has plastic sides, attach the adhesive-backed Velcro to the corresponding Velcro points on the liner sides. Carefully position the side panels neatly into place, working from the bottom upwards, and peeling off each backer piece as you go.

PART 2 - REMOVABLE BUMPER FLAP

8. Match the hook Velcro on the bumper flap to the loop Velcro sewn at the tailgate end of the liner.

PART 3- OPTIONAL TAILGATE PROTECTOR

9. If you install this piece, before you start you'll need to cut the remaining supplied Velcro as follows: 24 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the tailgate.

PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD.


Velcro Fixing Kit - 1 x 150 Inch Velcro strip supplied, please cut to length as required

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

SKETCH A

— = INDICATES AREAS WHERE A 2" ADHESIVE-BACKED VELCRO PIECE NEEDS TO BE APPLIED

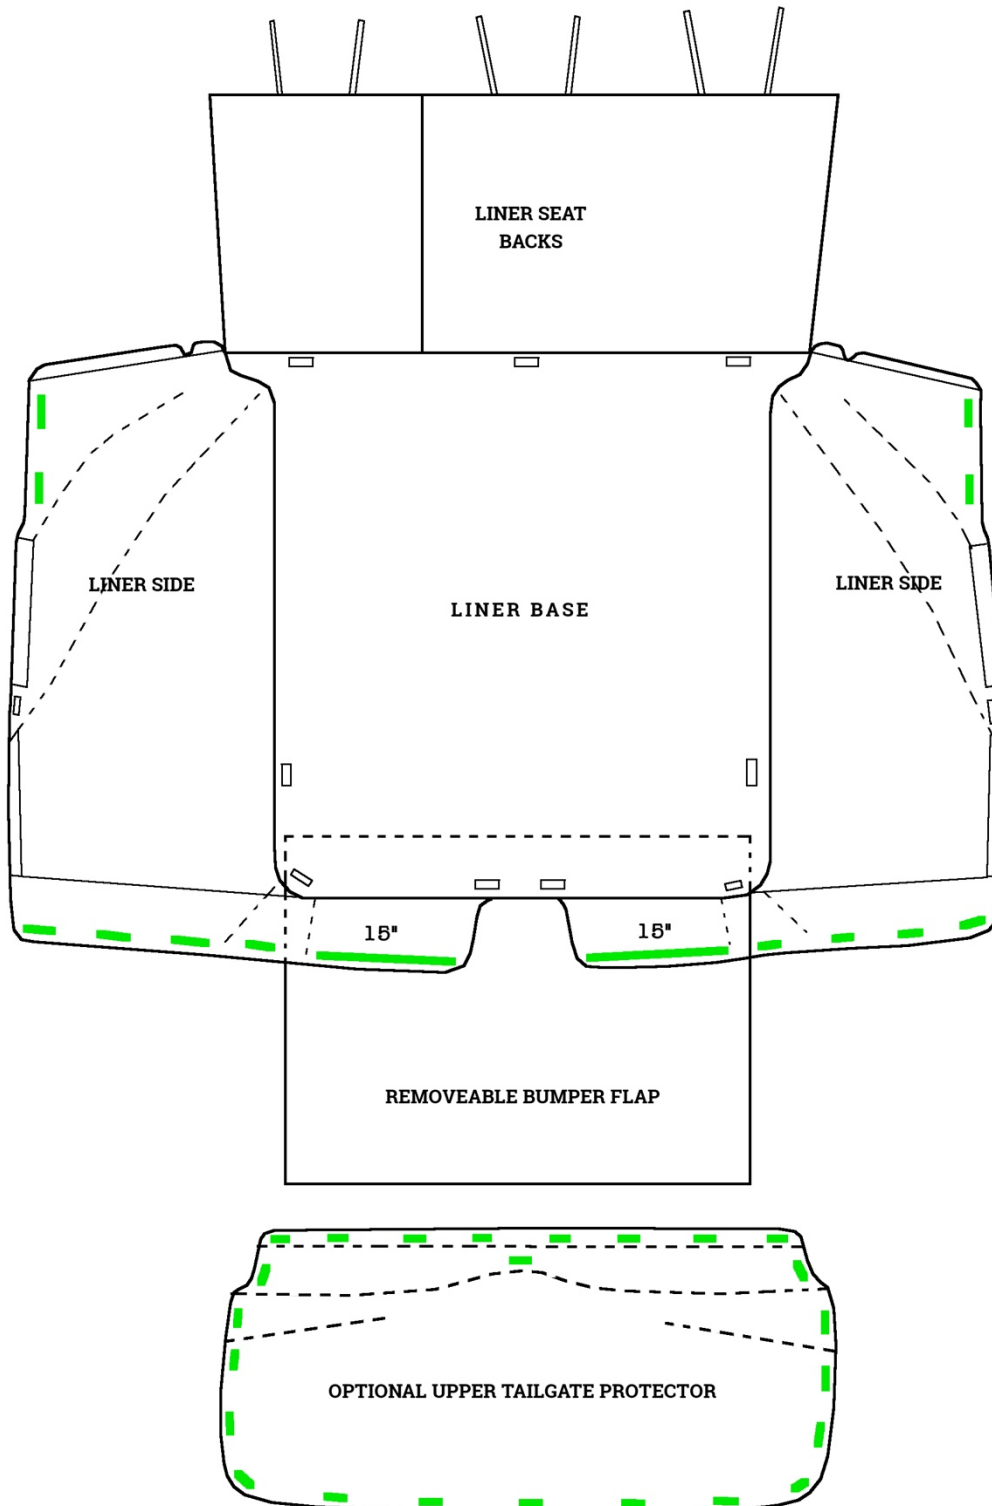

Velcro Fixing Kit - 1 x 150 Inch Velcro strip supplied, please cut to length as required