



NORTH AMERICAN CUSTOM COVERS

Fitting Instructions - Land Rover Range Rover Quilted Cargo Liner 2002 to 2012 Generation 3 (QBL216)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. **ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE**

This is a 2 part liner.

PART 1 - THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 2 x 2" pieces. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the Custom Covers label attached sits against the back of the rear seat.

ATTACH THE BASE FIRST ...

2. On the liner floor area, at the tailgate end you will find a pocket the width of the plastic hinge cover, position this over the plastic hinge cover.
3. At the tailgate end of the liner, work towards the rear seats, snugly placing the base of the liner in position.
4. Close to the rear seat end, there are 2 ties located on the base of the liner. Attach these to the adjacent luggage tie down rings.

NOW FOR THE BACK OF THE SEATS ...

5. At the top of the seat area of the liner there are 5 lengths of material. Attach each of these around each headrest pole and secure back on to itself.

NOW THE SIDES ...

6. Position one side panel approximately in place, open the side access panel and place the large elastic loop over the top of the door. The small elastic loop passes over the access door's plastic catch. Now carefully close the access door, repositioning the liner side neatly in to position as you do. Repeat for the other side.
7. On one side, nearest the tailgate, locate the two slots, and pass over the corresponding hooks. Repeat on the other side (PHOTO A).
8. At the top of each side are two ties, attach to the corresponding hooks / rear seat locking point on both sides.
9. Re-position the tailgate end of the side panels snugly into place, so that you can place the taped edge behind the rear door rubber seal.
10. Tuck the small flap on each side of the liner under the floor panel (PHOTO B).
11. Attach the 2 x 2" strips of Velcro (1 each side) to the locker handle recess, and attach the liner (PHOTO C).

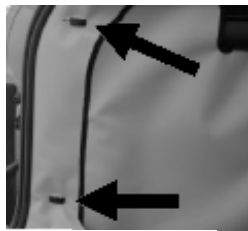


PHOTO A



PHOTO B

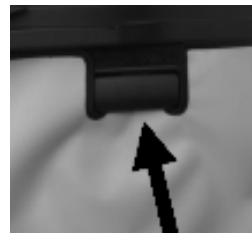


PHOTO C

PART 2 - OPTIONAL TAILGATE PROTECTOR

12. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 12 x 2" pieces.
13. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the tailgate.

THAT'S IT, YOU'RE FINISHED.

PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD