



NORTH AMERICAN CUSTOM COVERS

Fitting Instructions - Mercedes E Class Wagon 2010-2016 (QBL264)

Thank you for purchasing your cargo liner from our family-run business. Please follow the steps below to install your liner.

This is a 2 part liner.

PART 1 - THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 23 x 2" long pieces. Now lay the liner in approximate position in the trunk of your vehicle. The panel with the North American Custom Covers label attached sits against the back of the rear seat, facing outward.

ATTACH THE BASE FIRST ...

2. Unlock the rear seat backs and fold forward a little.
3. At the seat end of the base, locate the two foam pads and push them down into the void between the floor and the seat backs. Lock the rear seats back into position trapping in the foam pads.
4. Carefully align the rest of the base of the liner in the floor of the vehicle.

NOW FOR THE BACK OF THE SEATS ...

5. At the top of the seat area of the liner there are 6 lengths of material. Attach each of the 6 around each headrest pole and secure back on to itself.

NOW THE SIDES ...

6. Open the access panel located on the left and right hand side of the vehicle and place the large elastic loop over the top, then close shut to secure.
7. Carefully position the remainder of the side panels neatly into place, attach the 23 x 2 inch Velcro strips of Velcro supplied to the corresponding Velcro points along the top and rear end of each liner side. Using the liner as a guide, peeling off the backer on the adhesive-backed Velcro as you go, attach directly to the side trim.

PART 2 - OPTIONAL UPPER TAILGATE PROTECTOR

8. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 26 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and using the liner as a guide fix to the upper tailgate.


PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD

Velcro Fixing Kit - 23 x 2 inch for the main liner sides.
26 x 2inch for the tailgate protectors.
(100 inch Velcro strip supplied, please cut to required lengths)

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

SKETCH A

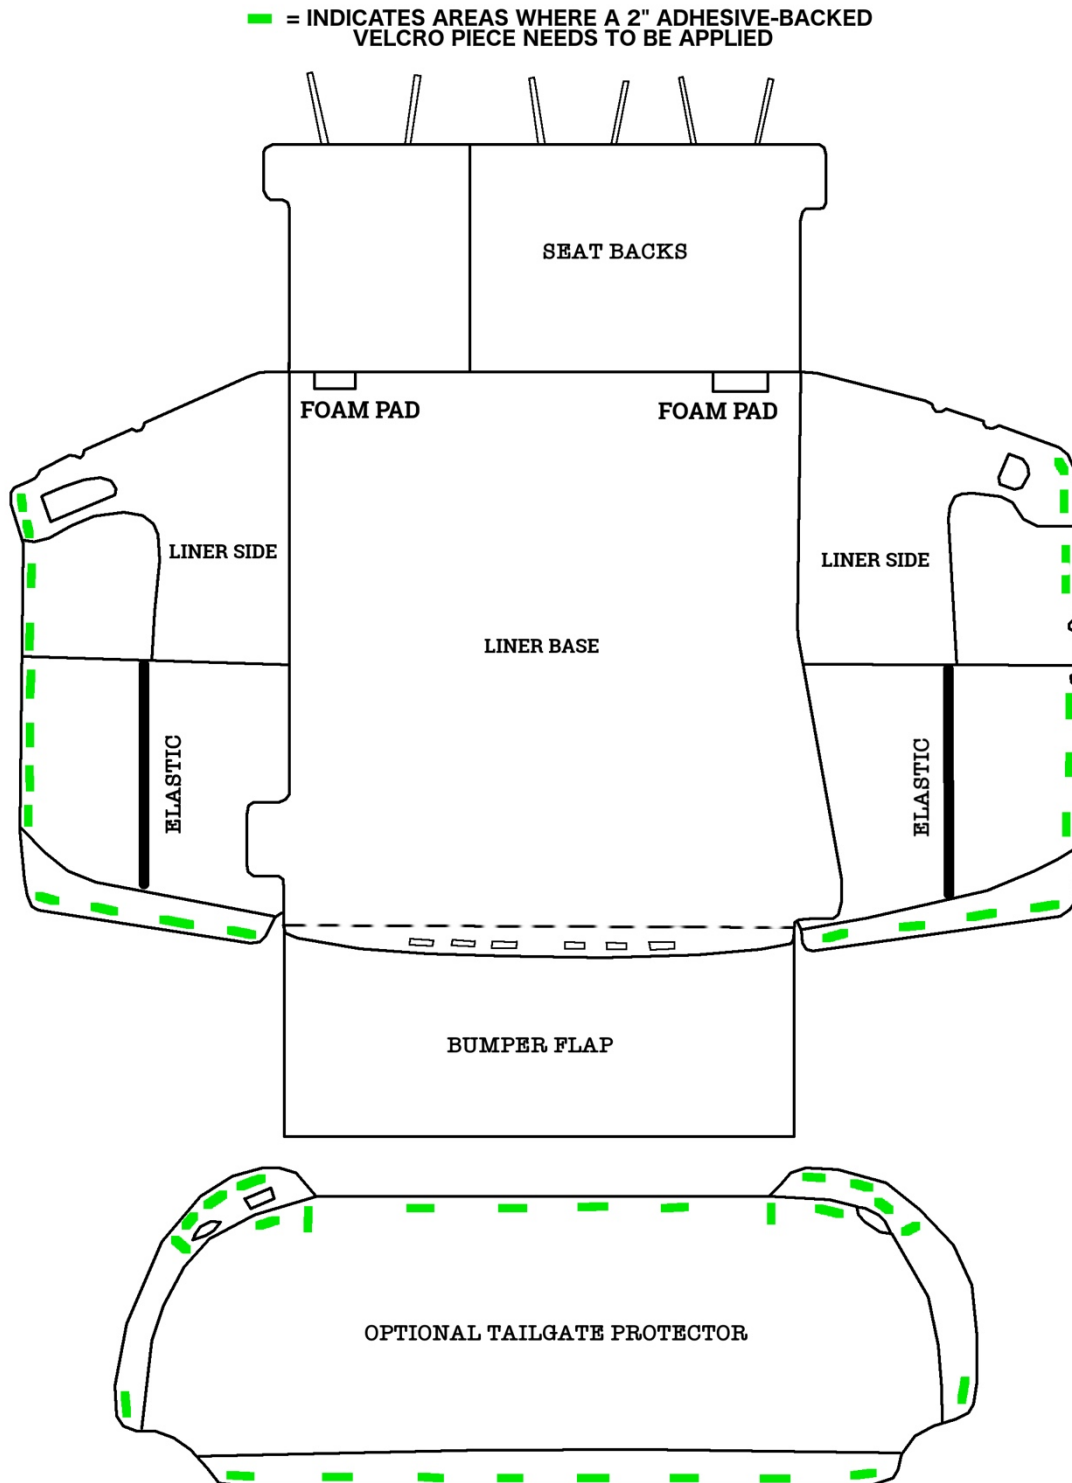

Velcro Fixing Kit - 23 x 2 inch for the main liner sides.
26 x 2inch for the tailgate protectors.
(100 inch Velcro strip supplied, please cut to required lengths)